

PRODUCT INSTRUCTIONS

Easy-Off TV/Audio Control Socket (ES-AUS1002)

Thank you for purchasing this product from Watts Clever. The Easy-Off socket is designed to allow you to ensure that your TV and other connected AV equipment is fully turned off and not left in standby mode overnight or whilst you are out. This will help you to use less energy, reduce your CO2 emissions, and save on your electricity costs.

Safety Information

- Do not exceed the maximum load of 10Amps/ 2400watts either with a single appliance or with a group of appliances connected via a power strip.
- For indoor use only.
- If the interconnection cord is damaged it shall be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.
- Always ensure the plug of any appliance is inserted fully into the socket.

Operation

Your Easy-Off socket will turn off the power completely too all connected electrical appliances automatically when you place them in standby mode. To restore power to the attached appliances simply press the nominated button on the TV or other IR remote control.

1. Plug the TV plug into the socket on the front of the Easy-Off socket. If you wish to connect more appliances, please connect a suitable power board to your Easy-Off socket then plug all appliances such as a TV, DVD, and audio equipment into this power board and turn the power board "ON". We suggest using a surge protected power board for added protection to connected devices.
2. Place the external IR sensor in a suitable position. Use the peel off sticker on the base to secure in position. The sensor must be a line of sight with the IR transmission from the remote control, if this is not the case you may experience difficulties in operation of the Easy-Off socket.
3. Place your Easy-Off socket into an available wall power socket, and ensure mains power is available.

4. The indicator light on the front of the unit will flash after being connected to the wall power socket. Press the button you wish to use, on your TV or other IR remote control, for the control of the Easy-Off socket. Please wait until the indicator light on the Easy-Off socket stops flashing. We recommend using a different button than the normal on/off button on the remote control. This is so only the Easy-Off socket is turned on when the button is pressed.
5. Set all electrical appliances connected to your Easy-Off socket to be in standby mode. After waiting for a minimum of 30 seconds, press the "ON/OFF" button on the EASY-OFF SOCKET, the indicator light will then turn off. Your Easy-Off settings are now completed.
6. If you wish to change the number of connected appliances, please press the ON/OFF button (while the socket is turned on) on your Easy-Off socket for a period of 4 seconds continuously until the indicator light flashes to indicate clearing of the memory code. Then, repeat steps 4 & 5 as shown above for re-setting.
7. When all the connected appliances are in standby mode then the Easy-Off socket, after approximately 60 seconds, will turn off the power to the attached appliances.
8. To restore power simply press the nominated button on your remote control, ensuring that it is pointing at the IR receiver you placed earlier. Or alternatively you can press the ON/OFF button on the Easy-Off socket.

Specifications

Voltages 240V/50HZ

Current 10A/2400W

Maximum Load is 2400 watts

Power Consumption: <0.25W

For detailed instructions visit www.wattsclever.com and go to the support section.
For product support visit: <http://support.wattsclever.com>